



SAMSUNG

DVD-C450K
DVD-C450
DVD-C360
DVD-C350K
DVD-C350

DVD Player

User Manual

imagine the possibilities

Thank you for purchasing this Samsung product.

To receive more complete service, please register your product at

www.samsung.com/global/register



AK68-01905A(01)



Precautions

1. Setting up

- Refer to the identification label located on the rear of your player for its proper operating voltage.
- Install your player in a cabinet with adequate ventilation holes. (7~10cm) Do not block ventilation holes on any of the components for air circulation.
- Do not push the disc tray in by hand.
- Do not stack components.
- Be sure to turn all components off before moving the player.
- Before connecting other components to this player, be sure to turn them off.
- Be sure to remove the disc and turn off the player after use, especially if you are not going to use it for a long time.
- The mains plug is used as a disconnect device and shall stay readily operable at any time.

2. For your safety

- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Do not open covers and do not repair yourself. Refer servicing to qualified personnel.

3. Caution

- Your player is not intended for industrial use but for domestic purposes. Use of this product is for personal use only.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Exterior influences such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the POWER button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- When condensation forms inside the player due to sharp changes in temperature, the

player may not operate correctly. If this occurs, leave the player at room temperature until the inside of the player becomes dry and operational.

4. Disc

- Do not use record-cleaning sprays, benzene, thinner, or other volatile solvents that may cause damage to the disc surface.
- Do not touch the disc's signal surface. Hold by the edges or by one edge and the hole in the center.
- Wipe the dirt away gently; never wipe a cloth back and forth over the disc.

5. Environmental info

- The battery used in this product contains chemicals that are harmful to the environment.
- So, dispose of batteries in the proper manner, according to federal, state, and local regulations.

The product unit accompanying this user manual is licensed under certain intellectual property rights of certain third parties. This license is limited to private non-commercial use by end-user consumers for licensed contents. No rights are granted for commercial use. The license does not cover any product unit other than this product unit and the license does not extend to any unlicensed product unit or process conforming to ISO/OUR 11172-3 or ISO/OUR 13818-3 used or sold in combination with this product unit. The license only covers the use of this product unit to encode and/or decode audio files conforming to the ISO/OUR 11172-3 or ISO/OUR 13818-3. No rights are granted under this license for product features or functions that do not conform to the ISO/OUR 11172-3 or ISO/OUR 13818-3.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

Contents

Precautions	2
Setup	
General Features	2
Descriptions	3
Tour of the Remote Control	4
Connections	
Choosing a Connection	5
Basic Functions	
Playing a Disc	6
Using the Search and Skip Functions	6
Using the Display Function	6
Using the Disc Menu and Title Menu	6
Repeat Play	6
Slow Play	7
Advanced Functions	
Adjusting the Aspect Ratio (EZ View)	7
Selecting the Audio Language	7
Selecting the Subtitle Language	7
Changing the Camera Angle	7
Using the Bookmark Function	7
Using the Zoom Function	8
Clips Menu for MP3/WMA/JPEG/MPEG4	
CD Audio	8
Folder Selection	8
MP3/WMA/CD Audio Playback	8
MPEG4 Playback	9
Playing media files Using the USB Host Feature (Only DVD-C450K,C450,C360)	9
CD Ripping (Only DVD-C450K,C450,C360)	10
Picture CD Playback	10
Karaoke Function	
Karaoke Function (Only DVD-C450K,C350K)	10
Changing Setup Menu	
Using the Setup Menu	11
Setting Up the Language Features	11
Setting Up the Audio Options	11
Setting Up the Display Options	11
Setting Up the Parental Control	11
Setting Up the Divx	12
Reference	
Troubleshooting	12
Specifications	12

Setup

General Features

Excellent Sound

Dolby Digital, a technology developed by Dolby Laboratories, provides crystal clear sound reproduction.

Screen

Both regular and widescreen(16:9) pictures can be viewed.

Slow Motion

An important scene can be viewed in slow motion.

Parental Control (DVD)

The parental control allows users to set the level necessary to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

Various On-Screen Menu Functions

You can select various languages (Audio/Subtitle) and screen angles while enjoying movies.

Progressive Scan

Progressive scanning creates an improved picture

with double the scan lines of a conventional interlaced picture.

EZ VIEW (DVD)

Easy View enables picture adjustment to match your TV's screen size (16:9 or 4:3).

Digital Photo Viewer (JPEG)

You can view Digital Photos on your TV.

Repeat

You can repeat a song or movie simply by pressing the REPEAT button.

MP3/WMA

This unit can play discs created from MP3/WMA files.

MPEG4

This unit can play MPEG4 formats within an avi file.

CD Ripping (Only DVD-C450K,C450,C360)

This feature lets you copy audio files from discs to USB device into MP3 format. (only audio CD (CD DA)).

Note

- Discs which cannot be played with this player.
 - DVD-ROM
 - CD-ROM
 - CDI
 - DVD+RW, -RW (V mode)
- Ability to play back may depend on recording conditions.
 - DVD-R, +R
 - CD-RW
 - The unit may not play certain CD-R, CD-RW and DVD-R due to the disc type or recording conditions.

COPY PROTECTION

Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.








This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intel-

lectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

PROGRESSIVE SCAN OUTPUTS (576p)

"CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 576 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING YOUR TV SET COMPATIBILITY WITH THIS MODEL 576p DVD PLAYER, PLEASE CONTACT SAMSUNG'S CUSTOMER SERVICE CENTER."

Disc Markings

	Play Region Number
	PAL broadcast system in U.K, France, Germany, etc.
	Dolby Digital disc
	Stereo disc
	Digital Audio disc
	DTS disc
	MP3 disc

Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is described on the rear panel of the player.

DivX Certification

DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc and are used under license.

 
DivX Certified to play DivX video.




Descriptions

Front Panel Controls


DVD-C450K




DVD-C450

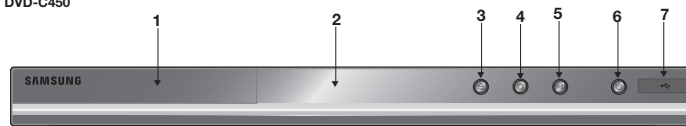


DVD-C360

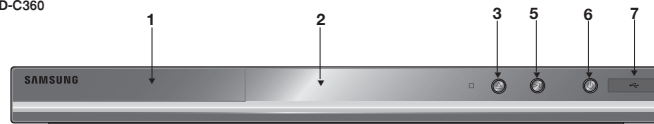

DVD-C350K

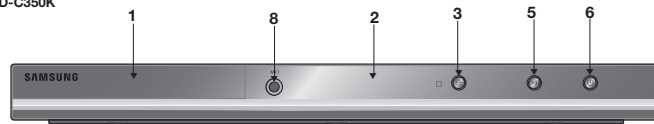

DVD-C350

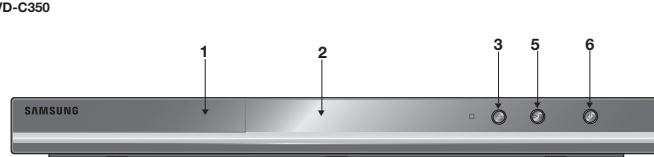

1. DISC TRAY

Place the disc here.

2. DISPLAY

Operation indicators are displayed here.

3. OPEN/CLOSE/STOP (▲)

Press to open and close the disc tray

4. STOP (■)

(Only DVD-C450K,C450)

Stop disc play.

5. PLAY/PAUSE (▶||)

Play or pause the disc / Stops Disc Play

6. POWER ON/OFF (⏻)

Turn On/Off the DVD Player

7. USB HOST

(Only DVD-C360,C450,C450K)

Connect digital still camera, MP3 player, memory stick, Card reader, or another removable storage devices.

8. MIC 1/2

(Only DVD-C350K,C450K)


Connect Microphone for karaoke functions.

9. MICROPHONE VOLUME

(Only DVD-C450K)

Use to adjust microphone volume level. Use the button by pressing it. Turn it to the left or right to control the volume.

DVD-C350K
DVD-C350

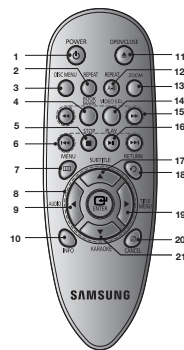

1. DVD POWER Button

Turns the power on or off.

2. REPEAT Button

Allows you to repeat play a title, chapter, track, or disc.

3. DISC MENU Button

Brings up the Disc menu.

4. BOOKMARK

Quickly find bookmark sections of a DVD.

5. STOP Button (■)

(Only DVD-C350K,C450)

Use to skip the title, chapter or track

7. MENU Button

Brings up the DVD player's menu.

8. ENTER/▲/▼,◀/▶ Buttons

This button functions as a toggle switch.

9. AUDIO Button (◀)

Use this button to access various audio functions on a disc.

10. INFO Button

Displays the current disc mode.

11. OPEN/CLOSE (▲) Button

To open and close the disc tray.

12. REPEAT A-B Button

Allows you to repeat A-B disc.

13. ZOOM Button

Enlarges the DVD Picture.

14. VIDEO SEL. Button

Selects video output for mats.

15. SEARCH Buttons (◀/▶)

Allow you to search forward/back ward through a disc.

16. PLAY/PAUSE Button (▶||)

Begin/Pause disc play.

17. SUBTITLE Button (▲)

18. RETURN Button

Returns to a previous menu.

19. TITLE MENU Button (▶)

Brings up the Title menu.

20. CANCEL Button


Use to remove menus or status displays from the screen.

21. KARAOKE Button (▼)

(Only DVD-C350K)

Use to begin Karaoke functions.

Tour of the Remote Control

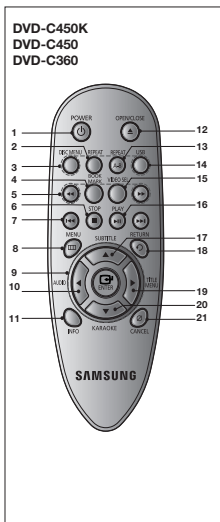

1. DVD POWER Button

Turns the power on or off.

2. REPEAT Button

Allows you to repeat play a title, chapter, track, or disc.

3. DISC MENU Button

Brings up the Disc menu.

4. BOOKMARK

Quickly find bookmark sections of a DVD.

5. SEARCH Buttons (◀/▶)

Allow you to search forward/back ward through a disc.

6. STOP Button (■)

7. SKIP Buttons (◀/▶)

Use to skip the title, chapter or track

8. MENU Button

Brings up the DVD player's menu.

9. ENTER / ▲/▼,◀/▶ Buttons

This button functions as a toggle switch.

10. AUDIO Button (◀)

Use this button to access various audio functions on a disc.

11. INFO Button

Displays the current disc mode.

12. OPEN/CLOSE (▲) Button

To open and close the disc tray.

13. REPEAT A-B Button

Allows you to repeat A-B disc.

14. USB Button

15. VIDEO SEL. Button

Selects video output formats.

16. PLAY/PAUSE Button (▶||)

Begin/Pause disc play.

17. SUBTITLE Button (▲)

18. RETURN Button

Returns to a previous menu.

19. TITLE MENU Button (▶)

Brings up the Title menu.

20. KARAOKE Button (▼)

(Only DVD-C450K)
Use to begin Karaoke functions.

21. CANCEL Button

Use to remove menus or status displays from the screen.

Connections

Choosing a Connection

The following shows examples of connections commonly used to connect the DVD player with a TV and other components.

Before Connecting the DVD Player

- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to the user's manual of the additional components you are connecting for more information on those particular components.

A. Connecting to a TV (SCART)

- Using Scart cable, connect to **SCART** terminal on the rear of the DVD player to the **SCART IN** terminals of TV.
- Turn on the DVD player and TV.
- Press the input selector on your TV remote control until the Video signal from the DVD player appears on the TV screen.

B. Connecting to a TV (VIDEO CVBS)

- Using video/audio cables, connect the **VIDEO (yellow)/AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **VIDEO (yellow)/AUDIO (red and white) IN** terminals of TV.
- Turn on the DVD player and TV.
- Press the input selector on your TV remote control until the Video signal from the DVD player appears on the TV screen.

Note

- **Noise may be generated if the audio cable is too close to the power cable.**
- If you want to connect to an Amplifier, please refer to the Amplifier connection page.
- The number and position of terminals can vary depending on your TV set. Please refer to the user's manual of the TV.
- If there is one audio input terminal on the TV, connect it to the [AUDIO OUT][left] (white) terminal of the DVD player.
- If you press the VIDEO SEL. button when DVD Player is in stop mode or no disc is inserted, the Video Output mode changes in the following sequence: (SCART-CVBS → I-SCAN → P-SCAN → SCART-RGB).

C. Connection to an Audio System (2 Channel Amplifier, Dolby Digital, MPEG2 or DTS Amplifier)

- Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of the Amplifier.
- If Using the video signal cable(s), connect the **VIDEO** terminals on the rear of the DVD player to the **VIDEO** terminal of your TV. If using a coaxial cable, connect the **DIGITAL AUDIO OUT (COAXIAL)** terminal on the rear of the DVD player to the **DIGITAL AUDIO IN (COAXIAL)** terminal of the Amplifier.
- Turn on the DVD player, TV, and Amplifier.
- Press the input select button of the Amplifier to select **external input** in order to hear sound from the DVD player.


Refer to your Amplifier's user manual to set the Amplifier's audio input.

D. Connections to a TV Interlace / Progressive

- Using component video cables, connect the **COMPONENT VIDEO OUT** terminal on the rear of the DVD player to the **COMPONENT IN** terminal of TV.
- Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of TV. Turn on the DVD player and TV.
- Press the input selector on your TV remote control until the Component signal from the DVD player appears on the TV screen.
- Set the Video Output to **I-SCAN/P-SCAN** in the Display Setup menu. You can use the **VIDEO SEL.** button to change the Video Output mode.

Note

- What is "Progressive Scan"? Progressive scan has twice as many scanning lines as the interlace output method has. Progressive scanning method can provide better and clearer picture quality.
- There is no component video displayed when "SCART-RGB" Selected by pressing VIDEO SELECT button on remote control.

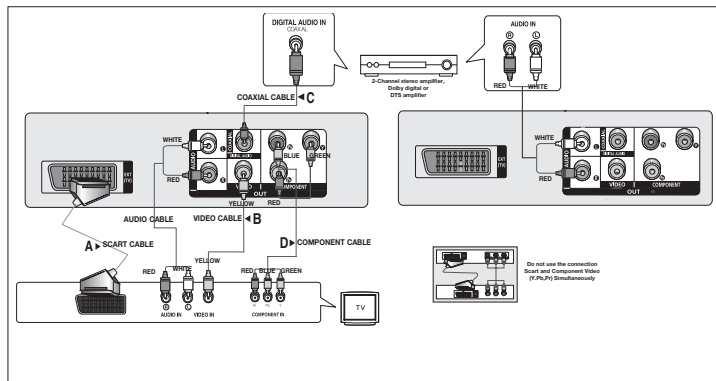

Basic functions

Playing a Disc

Before Play

- Turn on your TV and set it to the correct Video Input by pressing TV/VIDEO button on the TV remote control.
- If you connected an external Audio System, turn on your Audio System and set it to the correct Audio Input.

After plugging in the player, the first time you press the DVD **POWER** button, : If you want to select a language, press a **▲/▼** button then press **ENTER** (This screen will only appear when you plug in the player for the first time.) If the language for the startup screen is not set, the settings may change whenever you turn the power on or off. Therefore, make sure that you select the language you want to use. Once you select a menu language, you can change it by pressing the **■** / **▲** button on the front panel of the unit for more than 5 seconds with no disc in the unit. Then the **SELECT MENU LANGUAGE** window appears again where you can reset your preferred language.

Using the Search and Skip Functions

During play, you can search quickly through a chapter or track, and use the skip function to jump to the next selection.

Searching through a Chapter or Track

During play, press the **SEARCH** (**◀◀** or **▶▶**) button on the remote control for more than 1 second.

DVD	2X, 4X, 64X, 128X
CD	2X, 4X, 8X

Note

- The speed marked in this function may be different from the actual playback speed.
- No sound is heard during search mode (Except CD).

Skipping Tracks






During play, press the **SKIP** (**◀◀** or **▶▶**) button.

- When playing a DVD, if you press the **SKIP** (**▶▶**) button, it moves to the next chapter. If you press the **SKIP** (**◀◀**) button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
- When playing a CD, if you press the **SKIP** (**▶▶**) button, it moves to the next track. If you press the **SKIP** (**◀◀**) button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.

Using the Display Function

When Playing a DVD/MPEG4

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select the desired item.
3. Press the **◀/▶** buttons to make the desired setup and then press the **ENTER** button.
4. To make the screen disappear, press the **INFO** button again.

	To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a DVD, each movie will be identified.
	Most DVD discs are recorded in chapters so that you can quickly find a specific passage.
	Allows playback of the film from a desired time. You must enter the starting time as a reference. The time search function does not operate on some disc.
	Refers to the subtitle languages available in the disc. You will be able to choose the subtitle languages or, if you prefer, turn them off from the screen. A DVD disc can have up to 32 different subtitles.
	Enter and press the ◀/▶ buttons to access the desired Audio, Angle, Bookmark, EZ View function and Zoom. Refers to the language of the film soundtrack. In the example, the soundtrack is played in English 5.1CH. A DVD disc can have up to eight different soundtracks. Some DVD discs are have more angle function from any picture. Bookmark function make you easily and quickly to find a track or chapter from DVD or CD. The EZ View function is use for changing the aspect ratio in DVD. The ZOOM function is use for Enlarge DVD Picture

Using the Disc and Title Menu

During stop mode of a DVD disc, press the **DISC MENU/TITLE MENU** button on the remote control.

Note

- The Disc Menu may not work. Depending on the disc.
- You can also use the Disc Menu, using the **DISC MENU** button on the remote control.
- Title Menu will only be displayed if there are at least two titles in the disc.

Repeat Play

Repeat the current Chapter, title, disc, a chosen section (A-B), or all of the disc.

When playing a DVD

1. Press the **REPEAT** buttons to select Chapter, Title, Disc or Repeat Off.

- Chapter : repeats the chapter that is playing.
- Title : repeats the title that is playing.
- Disc : repeats the disc that is playing.
- Off

Using the A-B Repeat function

1. Press the **REPEAT A-B** button on the remote control at the point where you want repeat play to start (A).
2. Press the **REPEAT A-B** button on the remote control at the point where you want the repeat play to stop (B).
3. To return to normal play, press the **REPEAT A-B** then press the **ENTER** button until the display shows Repeat : Off. .

Note

- A-B REPEAT does not allow you to set point (B) directly after point (A) has been set.
- Depending on the disc, the Repeat function maynot work.

Slow Play

This feature allows you to repeat scenes slowly containing sports, dancing, musical instruments being played etc., so you can study them more closely.

When playing a DVD

1. During play, press the **PLAY/PAUSE (▶||)** button.
2. Press the **SEARCH (▶▶)** button to choose the play speed between 1/2, 1/4, 1/8 and 1/16 of normal during PAUSE.

Advanced functions

Adjusting the Aspect Ratio (EZ View)

To play back using aspect ratio (DVD)

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select **Shortcut**, then press the **ENTER** button.
3. Press the **◀/▶** buttons to select **EZ View**, then press the **ENTER** button.
 - Each time you press the **◀/▶** button, the screen size changes. For graphics of the screen sizes and the sequence in which the sizes change, see the next column.

If you are using a 16:9 TV

For 16:9 aspect ratio discs

- WIDE SCREEN
- SCREEN FIT
- ZOOM FIT

For 4:3 aspect ratio discs

- Normal Wide
- SCREEN FIT
- ZOOM FIT
- VERTICAL FIT

If you are using a 4:3 TV

For 16:9 aspect ratio discs

- 4:3 Letter Box
- 4:3 Pan Scan
- SCREEN FIT
- ZOOM FIT

For 4:3 aspect ratio discs

- Normal Screen
- SCREEN FIT
- ZOOM FIT

Note

This function may behave differently depending on the type of disc.

Selecting the Audio Language

You can select a desired audio language quickly and easily with the AUDIO button.

Using the AUDIO/◀ button (DVD/MPEG4)

1. Press the AUDIO/◀ button. The Audio changes when the button is pressed repeatedly. The audio languages are represented by abbreviations.
Press the Audio/◀ button on the remote control repeatedly to select the desired audio on MPEG4 then press the ENTER.

Note

- This function depends on audio languages are encoded on the disc and may not work.
- A DVD disc can contain up to 8 audio languages.

Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE (▲) button.

Using the SUBTITLE / ▲ button (DVD/MPEG4)

1. Press the SUBTITLE / ▲ button. The subtitle languages are represented by abbreviations. The subtitle changes when the button is pressed repeatedly.
2. To remove the **SUBTITLE** icon, press the SUBTITLE / ▲ button.

Note

- You have to change the desired subtitle in the Disc Menu, according to discs. Press the DISC MENU button.
- This function depends on what subtitles are encoded on the disc and may not work on all DVDs.
- A DVD disc can contain up to 32 subtitle languages.

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can use the ANGLE function.

Using the ANGLE button (DVD)

If the disc contains multiple angles, the ANGLE appears on the screen.

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select **Shortcut**, then press the **ENTER** button.
3. Press the **◀/▶** buttons to select **Angle**, then press the **ENTER** button.
4. Press the **◀/▶** buttons on the remote control to select the desired angle.

Note

- If the disc has only one angle, this feature won't work. Currently, very few discs have this feature.
- Depending on the disc, these functions may not work.

Using the Bookmark Function

This feature lets you bookmark sections of a DVD so you can quickly find them at a later time.

Using the Bookmark Function

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select **Shortcut**, then press the **ENTER** button.
3. Press the **◀/▶** buttons to select **Bookmark** then press the **ENTER** button.
4. When you reach the scene you want to mark, press the **ENTER** button. Up to 12 scenes may be marked at a time.

Note

- Depending on a disc, the Bookmark function may not work.

Recalling a Marked Scene

- 1~3. The first 1~3 steps are the same as those for "Using the Bookmark Function".
4. Press the **◀/▶** buttons to select the bookmark marked scene.
5. Press the **PLAY/PAUSE (▶||)** button to skip to the marked scene.

Clearing a Bookmark

- 1~3. The first 1~3 steps are the same as those for "Using the Bookmark Function".
4. Press the **◀/▶** buttons to select the bookmark number you want to delete.
5. Press the **CANCEL** button to delete a bookmark number.

Using the Zoom Function

- Using the Zoom Function (DVD-C350K,C350)

1. During play, press the **ZOOM** button on the remote control.

- Using the Zoom Function (DVD-C450K,C450,C360)

1. During play, press the **INFO** button on the remote control.

2. Press the **▲/▼** buttons to select **Shortcut**, then press the **ENTER** button.

3. Press the **◀/▶** buttons to select **Zoom**, then press the **ENTER** button.

- During DVD play, press ENTER to zoom in 2X/3X/4X/ Normal in order.

Clips Menu for MP3/WMA/JPEG/MPEG/CD Audio

CD Audio or discs with MP3/WMA/JPEG contain individual songs and/or pictures that can be organized into folders as shown below. They are similar to how you use your computer to put files into different folders.

Open the disc tray. Place the disc on the tray. Close the tray. The tray closes and this screen display.



Folder Selections

- To select the Parent Folder

Press the **RETURN** button to go to parent folder, or press the **▲/▼** buttons to select “..” and press **ENTER** to go to the parent folder.

MP3/WMA/CD Audio Playback

1. Open the disc tray. Place the disc on the tray. Close the tray.

- Only one kind of file is played back when a disc or a folder contains both MP3 and WMA files.

2. Press the **▲/▼** buttons to select a song file.

- Press **ENTER** to begin playback of the song file.

Repeat/Random playback

Press the **REPEAT** button to change the playback mode. There are four modes, such as **Off**, **Track**, **Folder** and **Random**.

- Off : Normal Playback

- Track : Repeats the current song file.

- Folder : Repeats the song files which have the same extension in the current folder.

- Random : Song files which have the same extension will be played in random order.

To resume normal play, press the **CANCEL** button.

CD-R MP3/WMA file

When you record MP3 or WMA files on CD-R, please refer to the following.

- Your MP3 or WMA files should be ISO 9660 or JOLIET format.

ISO 9660 format and Joliet MP3 or WMA files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. This format is the most widely used.

- When naming your MP3 or WMA files, do not exceed 8 characters, and enter “.mp3, .wma” as the file extension.

General name format : Title.mp3. or Title.wma. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (,/, \, =, +).

- Use a decompression transfer rate of at least 128 Kbps when recording MP3 files.

Sound quality with MP3 files basically depends on the rate of compression/ decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128 Kbps and up to 160 Kbps. However, choosing higher rates, like Kbps or more, only rarely give better sound quality. Conversely, files with decompression rates below 128 Kbps will not be played properly.

- Use a decompression transfer rate of at least 64Kbps when recording WMA files.

Sound quality with WMA files basically depends on the rate of compression/decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 64Kbps and up to Kbps. Conversely, files with decompression rates below 64Kbps or over Kbps will not be played properly.

- Do not try recording copyright protected MP3 files.

Certain "secured" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMI Foundation). You cannot copy such files.

- Important :

The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality. You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).

- This unit can play a maximum of 500 files and 500 folders per disc.

MPEG4 Playback

MPEG4 Play Function

MPEG4 is a compressed video format designed to deliver DVD quality video at lower data rates and smaller file sizes. Types of MPEG4 files are DivX or Xvid. These files have an .avi extension. AVI files are used to contain the audio and video data. This unit can only play AVI format files with the ".avi" extension.

1. Open the disc tray. Place the disc on the tray. Close the tray.
2. Press the **▲/▼** buttons to select an avi file (DivX/Xvid) and then press **ENTER** button.

Repeat playback

Press the REPEAT button to change playback mode. There are 3 modes, such as Track, Folder and Off.

- Track : repeats the track that is playing.
- Folder : repeats the AVI files which have the same extension in the current folder.
- Off

MPEG4 Function Description

Function	Description
Skip (◀◀ or ▶▶)	During play, press the ◀◀ or ▶▶ button, it moves forward or backward 5 minutes.
Search (◀◀ or ▶▶)	During play, press the SEARCH (◀◀ or ▶▶) button and press again to search at a faster speed. Allows you to search at a faster speed in an AVI file. (2X, 4X, 8X)
Slow Motion Play	Allows you to search at a slower speed in an AVI file. (1/2, 1/4, 1/8, 1/16)

- These functions may not work depending on MPEG4 file.

CD-R AVI file

This unit can play the following video compression formats within the AVI file format:

- DivX 3.11 contents
- DivX 4 contents (Based on MPEG-4 Simple Profile)
- DivX 5 contents (MPEG-4 simple profile plus additional features such as bi-directional frames. Qpel and GMC are also supported.)
- Xvid MPEG-4 compliant Contents.

This unit supports all resolutions up to maximum below.

DivX5
720 x 480 @30fps 720 x 576 @25fps : Maximum bit rate :4Mbps

Note

- Some MPEG-4 files created on a personal computer may not be play back. That is why Codec Type, Version and Higher resolution over specification is not supported.
- This unit supports CD-R/RW written in MPEG4 in accordance with the "ISO9660 format".

Playing Media File Using the USB Host feature

(Only DVD-C450K,C450,C360)

You can enjoy the media files such as pictures, movies and tunes saved in an MP3 player, USB memory or digital camera in high audio by connecting the storage device to the USB port of the DVD Player.

Using the USB HOST feature

1. Connect the USB device to the USB port on the front of the unit.
2. Press the **▲/▼** buttons to select a file in USB. Press **ENTER** to Open file.

Note

- Each time the USB button on the remote control is pressed, a frame of the USB device selection will appear.
- "USB" appears on the display screen.
- When playing DVD or CD and USB inserted, "Press USB to select device" appear at the top left corner for a moment.
- USB MENU screen appears on the TV screen and the saved file is played.

Skip Forward/Back

During playback, press the (◀◀/▶▶) button.

- When there is more than one file, when you press the ▶▶ button, the next file is selected.
- When there is more than one file, when you press the ◀◀ button, the previous file is selected.

Safe USB Removal

To prevent damage to the memory stored in the USB device, perform safe removal before disconnecting the USB cable.

- Press the STOP (■) button
- Remove the USB cable.

Fast playback

To play back the disc at a faster speed, press (◀◀/▶▶) during playback.

- Each time you press either button, the playback speed will change as follows:
2x → 4x → 8x.

Compatible Devices

1. USB devices that support USB Mass Storage v1.0. (USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: Flash type MP3 player.
3. Digital camera: Cameras that support USB Mass Storage v1.0.
 - Cameras that operate as a removable disk in Windows (2000 or later) without additional driver installation.
4. USB Flash Drive: Devices that support USB2.0 or USB1.1.
 - You may experience a difference in playback quality when you connect a USB1.1 device.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader
 - Depending on the manufacturer, the USB card reader may not be supported.
 - If you install multiple memory devices into a multi card reader, you may experience problems.
6. If you use a USB extension cable, the USB device might not be recognized.
 - CBI (Control/Bulk/Interrupt) is not supported.
 - Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
 - A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table

16/32) file system is supported.)

- Some USB and MP3 players, when connected to this product, may not operate depending on the sector size of their file system.
- The USB HOST function is not supported if a product that transfers media files by its manufacturer-specific program is connected.
- Does not operate with Janus enabled MTP (Media Transfer Protocol) devices.
- The USB host function of this product does not support all USB devices.

CD Ripping (Only DVD-C450K, C450, C360)

This feature lets you to copy audio files from disc to USB device into MP3 format.

1. Open the discs tray. Place the Audio CD(CD DA) disc on the tray, and close the tray.
Connect the USB device to the USB port on the front of the unit. This screen will be displayed.
Press ENTER to select disc.
2. Press the RETURN button to display the ripping screen.
3. Press the ▲/▼ buttons, then press the ENTER button to select files for ripping.
- To deselect files, press ENTER button again.
4. Press the ► and ▼ button to select START, then press the ENTER button begin ripping.
- Ripping menu contain 4 button :
- Bit Rate, press **ENTER** to change 128kbps → 192kbps → 128kbps.
Standart : 128kbps.
Better Quality : 192kbps.
- Device selection, press **ENTER** to change between device (max 4).
- Select - Unselect, Press **ENTER** to change from Select all or Select none.
- Start ripping, press ENTER to start ripping process.

Note

- To return to CD DA screen, press the RETURN button again.
- When the CD ripping is in process the player will automatically begin playing.
- Only Audio CD (CD DA) discs can be ripped.
- Because the speed is 2.6x of normal speed. User is unable to play the CD DA through the rip ping process.

Picture CD Playback

1. Select the desired folder.
2. Press the ▲/▼ buttons to select a Picture file in the clips menu and then press the **ENTER** button.

Note

- Press the STOP button to return to the clips menu.
- When playing a Kodak Picture CD, the unit displays the Photo directly, not the clips menu.

Rotation

- Each time the ◀/▶ button is pressed, the picture rotates 90 degrees clockwise.
- Each time the ▲ button is pressed, the picture rotates 180 degrees.
- Each time the ▼ button is pressed, the picture changes to the mirror appearance.

Zoom

- Each time the ENTER Button is pressed repeatedly, the picture is enlarged. zoom mode : 100%, 125%, 150%, 200%.

Slide show

- When you press the ENTER/PLAY at JPEG file, it will go to full screen mode and automatically slide show.

Note

- Depending on a file size, the amount of time between each picture may be different from the manual.
- If you don't press any button, the slide show will start automatically in about 10 seconds by default.

CD-R JPEG Disc

- Only files with the ".jpg" and ".JPG" extensions can be played.
- If the disc has not been closed during the recording phase, (ie has not been finalised) it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- The name of the JPEG file may not be longer than 8 characters and should contain no blank spaces or special characters (. / = +).
- Only a consecutively written multi-session disc can be played. If there is a blank segment in the multi-session disc, the disc can be played only up to the blank segment.
- A maximum of 500 images can be stored on a single CD.
- Kodak Picture CDs are recommended.
- When playing a Kodak Picture CD, only the JPEG files in the pictures folder can be played.
- Kodak Picture CD: The JPEG files in the pictures folder can be played automatically.
- Konica Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- Fuji Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- QSS Picture CD: The unit may not play QSS Picture CD.
- If the number of files in 1 Disc is over 500, only 500 JPEG files can be played.
- If the number of folders in 1 Disc is over 500, only JPEG files in 500 folders can be played.

karaoke functions

Karaoke Functions

Operation Sequence (Only DVD-C450K, C350K)

1. Connect the Mixed Audio Out terminals with the TV or Amplifier.
2. Connect Mic into Mic jack. When a MIC is connected, the karaoke functions can be used.

Mic Volume and Key Control

1. Playback the Karaoke Disc containing the wanted songs.
 - Press the **KARAOKE** button to select **Mic Volume** then press **KARAOKE** button again to select **keycon**.
2. Press the ◀/▶ buttons to change the desired tone.

Note

- If you hear feedback (squealing or howling) while using the karaoke feature, move the microphone away from the speakers or turn down the microphone volume or the speaker volume.
- When playing MP3, WMA, DTS and LPCM disc, the karaoke functions will not operate.
- When the MIC is connected, Digital Out does not work.
- The MIC sound outputs only from Analog Audio Out.

Changing setup menu

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

1. With the unit in stop mode, press the **MENU** button on the remote control. Use the ◀/▶ buttons to select Setup, then press the ▼ or **ENTER** button.
2. Press the ▲/▼ buttons to select a menu option. Press the ► or **ENTER** to bring up the sub-menu.
3. To make the setup screen disappear after setting up, press the **MENU** button again.

Note

Depending on the disc, some Setup Menu selections may not work.

Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, they will come up automatically every time you watch a movie.

Using the Player Menu Language

1. With the unit in stop mode, Press the **MENU** button.
2. Press the ◀/▶ buttons to select **Language Setup Page**, then press the ▼ or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired language, then press the **ENTER** button.

Note

- The language is selected and the screen returns to Language Setup menu.
- To make the setup menu disappear, press the **MENU** button.
- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- Select "Original" if you want the default soundtrack language to be the original language the disc is recorded in.
- Select "Automatic" if you want the subtitle language to be the same as the language selected as the audio language.
- Some discs may not contain the language you select : in that case the disc will use its original language setting.

Setting Up the Audio Options

Audio Options allows you to setup the audio device and sound status settings depending on the audio system in use.

1. With the unit in stop mode, press the **MENU** button.
2. Press the ◀/▶ buttons to select **Audio Setup page**, then press the ▼ or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ► or **ENTER** button.

Note :

- Even when PCM Down sampling is Off Some discs will only output down sampled audio through the digital outputs.
- There is no analog audio output when you play a DTS sound disc.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Setting Up the Display Options

Display options enable you to set various video functions of the player.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the ◀/▶ buttons to select **Display Setup Page**, then press the ▼ or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ► or **ENTER** button.

- Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual regarding Progressive Scan settings in the TV's menu system.
- If Video Output is set incorrectly, the screen may be blocked.
- When the resolution is changed during playback, it may take a few seconds for a normal image to appear.

Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating, which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

Setting Up the Rating Level / Changing the Password

1. With the unit in Stop mode, press the **MENU** button.
2. Press the ◀/▶ buttons to select **Parental Page**, then press the ▼ or **ENTER** button.
3. Press the ▲/▼ buttons to select **Parental/Password**, then press the ► or **ENTER** button.
4. Press the ▲/▼ buttons to select **Rating Level** you want, then press the **ENTER** button.
e.g) Setting up in KID SAFE.
5. Enter your password, If this is the first time, enter 0000. Then, enter a new password. The new pass-word must be a number other than 0000 to activate the parental control function, then re-enter the new password.

Note

- ① KID SAFE.
 - ② G (General Audiences) : All Ages Admitted.
 - ③ PG (Parental Guidance suggested) : Some material may not be suitable for young children.
 - ④ PG 13 (PG-13 Parents strongly cautioned) : Some material may be in appropriate for children under 13.
 - ⑤ PGR (Parental Guide Recommended) : These are not necessarily unsuitable for children, but viewer discretion is advised, and parents and guardians are encouraged to supervise younger viewer.
 - ⑥ R (Restricted) : Under 17 requires accompanying adult.
 - ⑦ NC17 (NC-17) : No one 17 and under admitted.
 - ⑧ ADULT.
- If you have forgotten your password, see "Forgot Password" in the Troubleshooting Guide.

Setting Up the DivX

1. With the unit in Stop mode, press the **MENU** button.
2. Press the ◀/▶ buttons to select **DivX Page**, then press the ▼ or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ▶ or **ENTER** button.

Note :

- Press Ok will make the registration code window disappear.
- DivX can only be accessed at stop mode.

Reference

Troubleshooting

Before requesting service (troubleshooting), please check the following.

Problem	Action
The screen is blocked	• Press the ■ / ▲ button (in front panel) for more than 5 seconds under no disc inside. All settings will revert to the factory settings.
Forgot password.	• Press the ■ / ▲ button (in front panel) for more than 5 seconds under no disc inside. All settings including the password will revert to the factory settings. Don't use this unless absolutely necessary.

Specifications

General	Power Requirements	AC 110-240 V ~ 50/60 Hz
	Weight	DVD-C450K,C450 : 1.5 Kg DVD-C360,C350K,C350 : 1.2 Kg
	Power Consumption	6W
	Dimensions	DVD-C450K,C450 : 430mm (W)X 207mm (D) X 42mm (H) DVD-C360,C350K,C350: 360mm (W) X 207mm(D) X 42mm (H)
	Operating Temperature Range	+5°C to +35°C
	Operating Humidity Range	10 % to 75 %
Video Output	Scart Jack	R(Red) : 0.7 Vp-p (75 Ω load) G(Green) : 0.7 Vp-p (75 Ω load) B(Blue) : 0.7 Vp-p (75 Ω load) Composite Video : 1.0 Vp-p (75 Ω load) Luminance Signal : 1.0 Vp-p (75 Ω load) Color Signal : 0.3 Vp-p (75 Ω load)
	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
Audio Output	Frequency Response	20Hz ~ 20KHz

Memo

Memo



**Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)**

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed

of, these substances can cause harm to human health or the environment. To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



UNITED KINGDOM

This Samsung product is warranted for the period of twelve (12) months from the original date of purchase, against defective materials and workmanship. In the event that warranty service is required, you should return the product to the retailer from whom it was purchased.

However, Samsung Authorised Dealers and Authorised Service Centres in other EC Countries will comply with the warranty on the terms issued to purchasers in the country concerned.

In case of difficulty, details of our Authorised Service Centres are available from:

Samsung Electronics U.K. Ltd.
Customer Care Centre PO Box 17243 Edinburgh,
EH11 4YB United Kingdom

United Kingdom

Tel : 0845 SAMSUNG (7267864)

Fax : 0845 650 8080

Web : www.samsung.com

EIRE

Tel : 0818 717 100

Fax : +44 (0)131 202 0630

Web : www.samsung.com

■ WARRANTY CONDITIONS

- The warranty is only valid if, when warranty service is required, the warranty card is fully and properly completed and is presented with the original invoice or sales slip or confirmation, and the serial number on the product has not been defaced.
- Samsung's obligations are limited to the repair or, at its discretion, replacement of the product or the defective part.
- Warranty repairs must be carried out by Authorised Samsung Dealers or Authorised Service Centres. No re-imbursement will be made for repairs carried out by non Samsung Dealers and, any such repair work and damage to the products caused by such repair work will not be covered by this warranty.



EIRE

- This product is not considered to be defective in materials nor workmanship by reason that it requires adaptation in order to conform to national or local technical or safety standards in force in any Country other than the one for which the product was originally designed and manufactured. This warranty will not cover, and no re-imbursement will be made for such adaptation nor any damage which may result.
- This warranty covers none of the following:
 - Periodic check ups, maintenance and repair or replacement of parts due to normal wear and tear.
 - Cost relating to transport, removal or installation of the product.
 - Misuse, including the failure to use this product for its normal purposes or incorrect installation.
 - Damage caused by Lightning, Water, Fire, Acts of God, War, Public Disturbances, incorrect mains voltage, improper ventilation or any other cause beyond the control of Samsung.
- This warranty is valid for any person who legally acquired possession of the product during the warranty period.

- The consumers statutory rights in any applicable national legislation whether against the retailer arising from the purchase contract or otherwise are not affected by this warranty. Unless there is national legislation to the contrary, the rights under this warranty are the consumers sole rights and Samsung, its subsidiaries and distributors shall not be liable for indirect or consequential loss or any damage to records, compact discs, videos or audio tape or any other related equipment or material.

SAMSUNG ELECTRONICS (U.K.) LTD.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Region	Area	Contact Center ☎	Web Site
North America	Canada	1-800-SAMSUNG (726-7864)	www.samsung.com/ca
	Mexico	01-800-SAMSUNG (726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com/us
	Argentina	0800-333-3733	www.samsung.com/ar
	Brazil	0800-124-421, 4004-0000	www.samsung.com/br
	Chile	800-SAMSUNG (726-7864)	www.samsung.com/cl
	Nicaragua	00-1800-5017267	www.samsung.com/nicar
	Honduras	800-7919267	www.samsung.com/hond
	Costa Rica	0-800-507-7267	www.samsung.com/cr
	Ecuador	1-800-10-7267	www.samsung.com/ec
Latin America	El Salvador	800-6225	www.samsung.com/sv
	Guatemala	1-800-299-0013	www.samsung.com/gu
	Jamaica	1-800-234-7267	www.samsung.com/jm
	Panama	800-7267	www.samsung.com/pa
	Puerto Rico	1-800-682-3180	www.samsung.com/pr
	Rep. Dominica	1-800-751-2676	www.samsung.com/dm
	Trinidad & Tobago	1-800-SAMSUNG (726-7864)	www.samsung.com/tn
	Venezuela	0-800-100-5303	www.samsung.com/ve
	Colombia	01-8000112112	www.samsung.com/co
	Belgium	02 201 2418	www.samsung.com/be (Dutch)
Europe	Czech Republic	800-SAMSUNG (800-726786)	www.samsung.com/cz (French)
	Denmark	8-SAMSUNG (7267864)	www.samsung.com/dk
	Finland	30-6227 515	www.samsung.com/fi
	France	01 4863 0000	www.samsung.com/fr
	Germany	01805-SAMSUNG (726-7864 € 0,14/Min)	www.samsung.de
	Hungary	06-80-SAMSUNG (726-7864)	www.samsung.com/hu
	Italy	800-SAMSUNG (726-7864)	www.samsung.com/it
	Luxemburg	02 261 03 710	www.samsung.com/lu
	Netherlands	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com/nl
	Norway	3-SAMSUNG (7267864)	www.samsung.com/no
Europe	Poland	0 801 SAMSUNG (172678), 022-607-93-33	www.samsung.com/pl
	Portugal	80820-SAMSUNG (726-7864)	www.samsung.com/pt
	Slovakia	800-SAMSUNG (726-7864)	www.samsung.com/sk
	Spain	902-1-SAMSUNG (902 172 678)	www.samsung.com/es
	Sweden	0771 726 7864 SAMSUNG	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
	Eire	0818 717 100	www.samsung.com/ie
	Austria	0810-SAMSUNG (7267864, € 0.07/min)	www.samsung.com/at
	Switzerland	0848-SAMSUNG (7267864, CHF 0.08/min)	www.samsung.com/ch (French)
	Russia	8-800-555-55-55	www.samsung.ru
CIS	Kazakhstan	8-10-800-500-55-500	www.samsung.com/kz_ru
	Uzbekistan	8-10-800-500-55-500	www.samsung.com/kz_ru
	Kyrgyzstan	00-800-500-55-500	www.samsung.com/kz_ru
	Tajikistan	8-10-800-500-55-500	www.samsung.com/kz_ru
	Ukraine	8-800-502-0000	www.samsung.ua
	Belarus	810-800-500-55-500	www.samsung.com/ua_ru
	Moldova	00-800-500-55-500	www.samsung.com/ua_ru
	Lithuania	8-800-77777	www.samsung.com/lt
	Latvia	8000-7267	www.samsung.com/lv
	Estonia	800-7267	www.samsung.com/ee
Asia Pacific	Australia	1300 362 603	www.samsung.com/au
	New Zealand	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
	China	400-810-5858, 010-6475 1880	www.samsung.com/cn
	Hong Kong	3698-4698	www.samsung.com/hk
	India	3030 6262, 1800 110011, 1800 3000 8282	www.samsung.com/in
	Indonesia	0800-112-9888	www.samsung.com/id
	Japan	0120-327-527	www.samsung.com/jp
	Malaysia	1800-88-9999	www.samsung.com/my
	Philippines	1-800-10-SAMSUNG (726-7864), 1-800-3-SAMSUNG (726-7864), 02-9805777	www.samsung.com/ph
	Singapore	1800-SAMSUNG (726-7864)	www.samsung.com/sg
Middle East & Africa	Thailand	1800-29-3232, 02-689-3232	www.samsung.com/th
	Taiwan	0800-329-999	www.samsung.com/tw
	Vietnam	1 800 588 888	www.samsung.com/vn
	Turkey	444 77 11	www.samsung.com/tr
	South Africa	0860-SAMSUNG (726-7864)	www.samsung.com/za
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/ae